


## Hinge Handles Installation Instructions

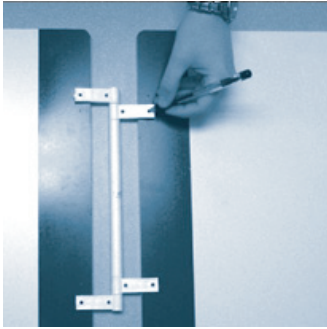


### Mark holes.

To determine where the holes need to be drilled, lay the boards that will become the A-frame sign top-to-top. Then place the HingeHandle between the boards as shown in the photo. Using the HingeHandle's screw holes as a template, mark the holes.




### Drill holes.

Simply drill the holes where marked using a 3/16" (4.7mm) drill bit.

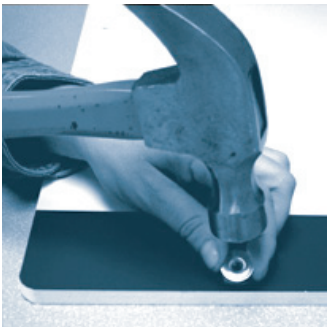

### Install HingeHandle.

Lay the HingeHandle between the boards as pictured above. Line up the HingeHandle's holes with the holes in the boards. Finally, drive the screws through the holes in the HingeHandle tabs, into the tee-nuts that you tapped into the board holes in step 3.

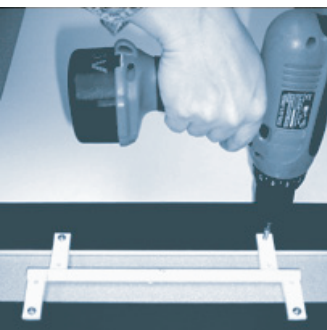

### Install tee-nuts.

With a hammer or mallet, lightly tap the tee-nuts into the holes you drilled in step 2. (While there are several ways to affix HingeHandles to A-frame signs, we recommend using tee-nuts and screws.)